

**AL20M, AL24M, AL28M
AL24A, AL32A
Auto Levels
User Guide**

Features




1. Focusing knob
2. Sighting guide
3. Crosshairs' adjustment screws (under cover)
4. Crosshairs' focusing ring
5. Eyepiece
6. Horizontal rotation ring and angle index
7. Leveling screws
8. Base plate
9. Circular level adjustment screws
10. Horizontal tangent knob
11. Circular level
12. Mirror for reading circular level
13. Objective

Maintenance and Care

- As with all precision instruments, the auto level should be transported and stored in its carrying case.
- When carrying the instrument mounted to a tripod, be sure to carry it vertically rather than over your shoulder.
- Whenever possible, store the instrument in a dry, shady area.
- Wipe the instrument clean with a cloth. Clean the objective and eyepieces with special care using a damp tissue or soft, clean, lint-free cotton cloth.
- When working in wet weather, wipe off the instrument and carrying case in the field and let them dry completely indoors with the case open.

Safety Information

Included in this manual are **Cautions** and **Notes**. Each of these words represents a level of danger or concern. A **Caution** indicates a hazard or unsafe practice that could result in *minor* injury or property damage. A **Note** indicates important information unrelated to safety.

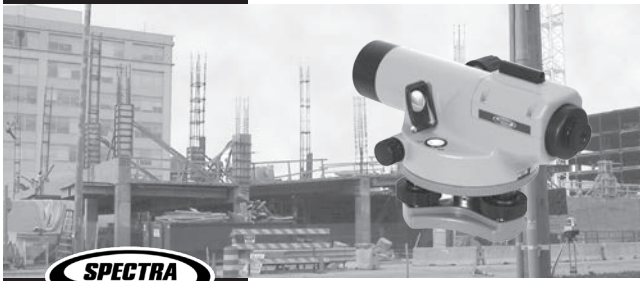

How to Use the Instrument

Setting Up the Instrument

1. Set up the tripod at a height appropriate for your use.
Note: Make sure the tripod is stable and the tripod head is relatively level.
2. Attach the instrument to the tripod.
3. Level the instrument using the circular level as a reference.
4. Focus the telescope crosshairs by turning the crosshairs' focusing ring.

Aligning the Instrument


1. Align the telescope to the grade rod using the sighting guides.
2. Turn the focusing knob to bring the grade rod into sharp focus. Precisely sight the center of the grade rod in the telescope crosshairs using the horizontal tangent knob.
3. Check for parallax shift.

Note: No parallax exists if the crosshairs and the grade rod graduations remain in coincidence even when you change your viewing angle (move your eye up/down and left/right in front of the eyepiece).

Note: After the bubble in the circular level has been centered, the compensator corrects residual line-of-sight inclinations. The compensator does not, however, eliminate any tilts resulting from inadequate adjustment of the circular level or line of sight. These must be checked regularly (see Adjusting the Instrument for more information).

Taking Measurements

Determining the Difference in Elevation

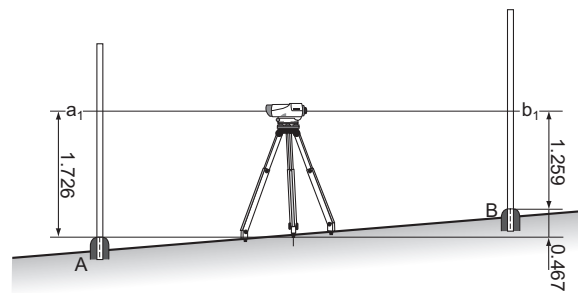

1. Set up the instrument half way between two points (A and B).
2. Take a reading at point A ($a_1 = 1.726$ m) and another one at point B ($b_1 = 1.259$ m).

Note: A slight deviation of the line of sight from horizontal will not cause any measuring error as long as the instrument is set up approximately half way between the two points.

3. Subtract b_1 from a_1 to get the difference between the points ($d = 0.467$ m).

Note: Point B is 0.467 higher than point A because the difference is a positive number. If point B were lower than point A, the number would be negative.


Establishing an Elevation

1. Set up and level the instrument.
2. Set the grade rod on a known elevation (30.55 m) and take a grade rod reading (1.72 m).
3. Add the grade rod reading to the known elevation to get the height of instrument or HI ($1.72 + 30.55 = 32.27$ m).
4. Subtract the elevation of the point you want to establish (31.02 m) from the HI (32.27) to calculate the difference between the two points ($32.27 - 31.02 = 1.25$ m).
5. Go to the point you want to establish and adjust the height of the grade rod until the calculated difference (1.25) is centered in the crosshairs.

Taking a Distance Measurement

Note: The instrument's stadia lines allow you to determine the distance between the instrument and the grade rod.

1. Take readings at the upper stadia line (1.436 m) and the lower stadia line (1.152 m).
2. Calculate the difference between the two readings ($1.436 - 1.152 = 0.284$ m).
3. Multiply the difference by 100 to get the distance between the instrument and the grade rod ($.284 \times 100 = 28.4$).

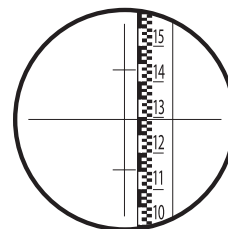

Computation Example


Elevation	
Center Line Reading	1.294 m
Distance Measurement	
Upper Stadia Line Reading	1.436 m
Lower Stadia Line Reading	1.152 m
Difference	0.284 m
Distance (0.284×100)	28. 4 m

Adjusting the Instrument

Circular Level

1. Set up the instrument.
2. Center the bubble of the circular level using the leveling screws.
3. Turn the telescope 180° (200 gon).
4. Check to see whether the bubble is still centered in the circle. If it isn't, eliminate one half of the error with the leveling screws and the other half with the two adjustment screws for the circular level.
5. Repeat the process until the bubble remains centered when the instrument is turned.

Line of Sight

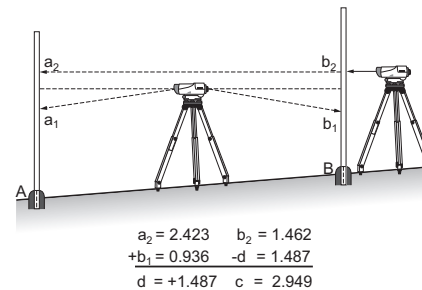

1. Set up the instrument half way between two points (A and B) that are 30 to 40 m apart.
2. Take a reading at point A ($a_1 = 2.423$ m) and another one at point B ($b_1 = 0.936$ m).
3. Subtract b_1 from a_1 to get the difference between the points ($d = +1.487$ m). Make sure you note whether value d is a positive or negative number.

Note: Because the distance from the instrument to each of the points is equal, the difference in elevation is correct even if the line of sight is out of adjustment.

4. Move the instrument and reset it up so that it is about 2 m behind point B.
5. Take another reading at point B ($b_2 = 1.462$ m).
6. Add b_2 to d to get value c ($1.462 + 1.487 = 2.949$ m).
7. Take another reading at point A (a_2).
8. Compare value c (2.949) to a_2 . If the line of sight is correct, both numbers should be the same. If they differ by more than 4 mm, reset the grade rod on point A and turn the crosshairs adjustment screws (unscrew the cover to expose them) until value c (2.949) is centered in the crosshairs.

Caution: The upper and lower adjustment screws are counter-screws and must not be set too tightly.

9. Repeat the process until the line of sight is correct (c and a_2 are the same).

Taking an Angle Measurement

1. Set up the tripod so that it is over a hub.
Note: Make sure the tripod is stable and the tripod head is relatively level.
2. Hang a plumb-bob from the plumb-bob hook on the tripod.
Note: Make sure the plumb-bob is over the hub.
3. Attach the instrument to the tripod.
4. Center the plumb-bob over the pin in the hub by varying the length of the tripod legs or by shifting the instrument on the tripod.
5. Accurately align the telescope to the first target using the sighting guides and a horizontal tangent knob.
Note: The first target is a known point.
6. Set the horizontal rotation ring to 0.
7. Accurately align the telescope to the second target and read the angle.

- 9 -

Specifications

	AL32A	AL24A	AL28M	AL24M	AL20M
Magnification	32X	24X	28X	24X	20X
Dampening	Air	Air	Magnetic	Magnetic	Magnetic
Accuracy*	+/-1.0mm	+/-2.0mm	+/-1.5mm	+/-2.0mm	+/-2.5mm
Leveling Accuracy @ 50m	0.5mm	1.2mm	2.5mm	2.5mm	2.5mm
Telescope:					
Aperture	30mm (1.2 in.)				
Telescope image	Erect				
Field of view angle	1°20'				
Shortest focus distance	0.60m (1.97 ft.)				
Stadia constant	100				
Addition constant	0				
Dimensions (L x W x H):					
Instrument	103 x 190 x 135mm (5.2 x 7.5 x 5.3 in.)				
Case	170 x 280 x 190mm (6.7 x 11 x 7.5 in.)				
Weight:					
Instrument	1.6 kg (3.5 lb)				
Case	1.25kg (2.75 lb)				

* Standard deviation according to DIN 18723 on 1 km of double leveling

- 13 -

- 10 -

- 14 -

- 11 -

Warranty

Spectra Precision (USA) LLC warrants the AL auto levels to be free of defects in material and workmanship for a period of 2 years. Spectra Precision or its authorized service center will repair or replace, at its option, any defective part, or the entire product, for which notice has been given during the warranty period. If required, travel and per diem expenses to and from the place where repairs are made will be charged to the customer at the prevailing rates. Customers should send the product to the nearest authorized service center for warranty repairs or exchange, freight prepaid. Any evidence of negligent, abnormal use, accident, or any attempt to repair the product by other than factory-authorized personnel using Spectra Precision certified or recommended parts, automatically voids the warranty. Special precautions have been taken to ensure the calibration of the laser; however, calibration is not covered by this warranty. Maintenance of the calibration is the responsibility of the user. The foregoing states the entire liability of Spectra Precision regarding the purchase and use of its equipment. Spectra Precision will not be held responsible for any consequential loss or damage of any kind. This warranty is in lieu of all other warranties, except as set forth above, including any implied warranty merchantability of fitness for a particular purpose, are hereby disclaimed. This warranty is in lieu of all other warranties, expressed or implied.

- 15 -

- 12 -

Service Request

To locate your local dealer or authorized Spectra Precision Service Center outside the U.S.A for service, accessories, or spare parts, contact one of our offices listed below.

Americas

Spectra Precision (USA) LLC
3265 Logistics Lane, Suite 200
Dayton, OH 45377 USA
888-527-3771 (Toll Free)

Europe, Middle East, Africa

Spectra Precision (Kaiserslautern) GmbH
Am Sportplatz 5
67661 Kaiserslautern
Germany
+49-6142-2100-0 Phone

www.spectraprecision.com

